 




LUXURY HEATED THROW

MODEL NO: PM 160

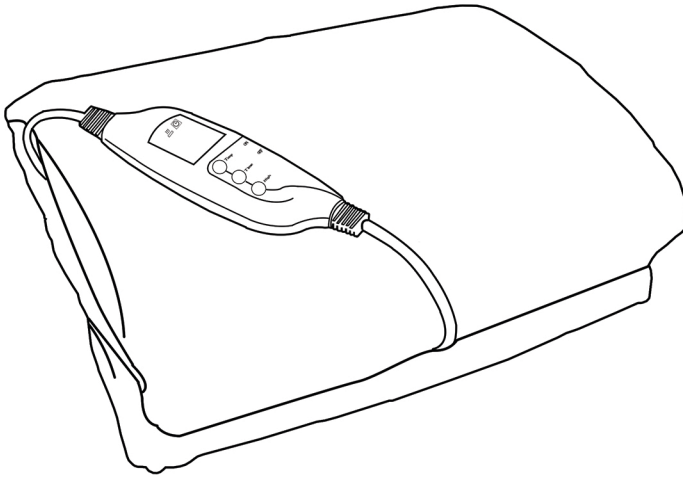

INSTRUCTION MANUAL

WARNING

Ensure that all safety precautions are followed when using electrical appliances for the proper operation of the device. This instruction booklet describes the safety precautions to be observed during operation to prevent injuries to yourself, other persons and damage to the device. The content not only is suitable for this product but also suitable for electrical appliances in general.

Thank you for purchasing the innovative PureMate heated throw. We wish you many years of healthy indoor air with this efficient and effective product.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of personal injury or damage to property, basic important safety instructions must be observed including the following:

Read the instruction manual thoroughly and retain for future reference. Ensure before use you know how the electric blanket works & how to operate it.

- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the electric blanket is not in use or before cleaning.
- Always use the electric blanket from a power outlet of the voltage (A.C. Only) marked on the rating label.
- Use only the type of controller marked on rating label.
- Use only for intended purpose.
- Do not use if it is damp or wet.
- This blanket is not intended for medical use in hospitals.

- Do not use together with another heating appliance.
- When in use ensure the blanket & mains leads do not get trapped.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance
- Examine the blanket frequently to check that there no signs of wear or damage if any damage/wear is spotted, do not use blanket and please contact PureMate customer service.
- If the supply cord of this appliance is damaged, it must only be replaced by the manu facturer, its service agent or similarly qualified persons in order to avoid a hazard. Please contact PureMate Customer Service.
- This appliance must not be used by persons insensitive to heat and other very vulner able persons who are unable to react to overheating.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.

- This appliance is not be used by young children over 3 years of age, unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.

SYMBOL EXPLANATION



Read the instructions for use



Maximum washing temperature 40°C, mild process
(for models with detachable controller)



Do not dry clean



Do not bleach



Do not tumble dry



Do not iron



Do not insert pins



Do not use folded or rucked



Not to be used by very young children (0-3 years)

OPERATING INSTRUCTIONS


- This electric blanket is intended to be used as an over blanket, it is to be on top of the individual and not under them, or it should be placed above a top sheet on top of the person and not under them on a mattress.
- Do not tuck it in around or under the person. It should remain loose so as not to prohibit the user's movement.

USING THE ELECTRIC BLANKET

Connect the controller to the blanket, simply hold the socket with one hand and push the controller plug all the way until the locking tab locates over the plug on top of the controller plug.

- Ensure there is a mains supply is nearby and that when in use, the mains lead will not be in a position that could cause a tripping hazard.
- Ensure there is a mains supply is nearby and that when in use, the mains lead will not be in a position that could cause a tripping hazard.
- When plugged into the mains supply, the controller must be within easy reach of the user.
- Do not cover the controller and do not exert pressure on the controller.

FOR CONTROLLER

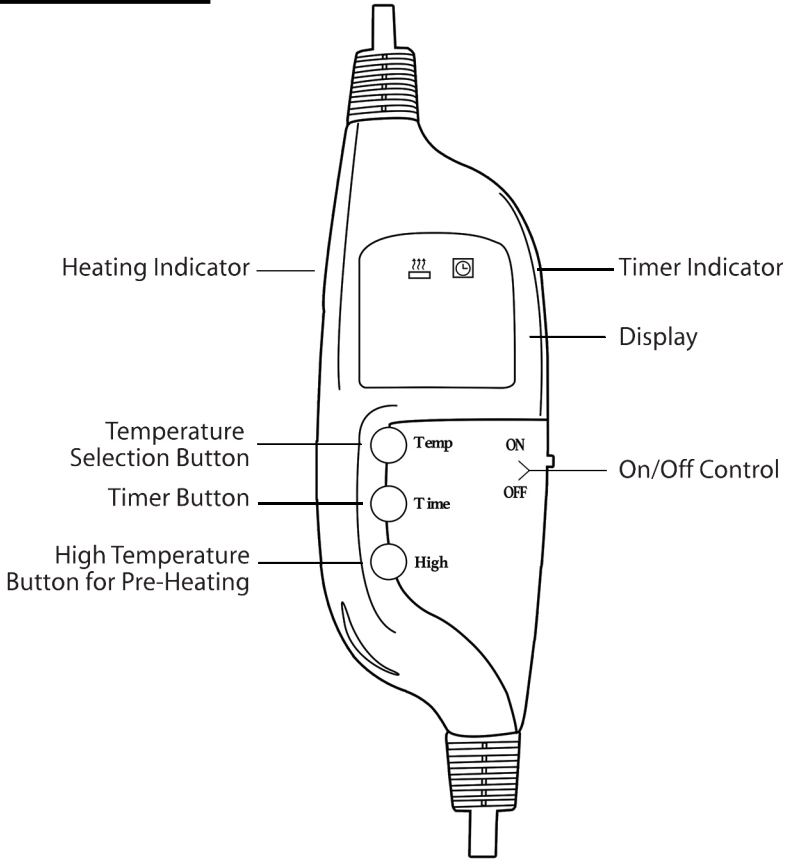

- 1) Please set at “H” high temperature to preheat for 30-60 minutes before using.
- 2) Select the desired temperature position.

If using during sleep or for long periods of time, please set at “L” low temperature position or “1” temperature position, to avoid overheating which may cause discomfort. The starting up state is the standby state. The digital display of temperature position is “0” and the digital display of timing position is “0”

- a. Press “Temp” button, the digital display of temperature position is “7” and the digital display of timing position is “9”.
- b. Press “Temp” button, the digital display of temperature position circulates from “L.1.2.3.4.5.6.7”.L being low, and 7 being high.
- c. Press “Time” button, the digital display of timing position circulates from “1.2.3.4.5.6.7.8.9”. 1 is for 1 hour, 9 is for 9 hours.
- d. Press “High” button, the high temperature position is preheating, which is display as “H”. The high temperature position will automatically change to “L” low temperature position after 1 hour.

CONNECTING AND REMOVING THE CONTROLLER



WARNING: DO NOT leave the remote control underneath the blanket, wrapped in the blanket or on the blanket while it is turned on.

Your electric blanket is fitted with overheat protection. If your controller gets too hot, the electric blanket will turn off and the remote will display ‘C’. Turn the remote control off. Place the remote so that no part of it touches the blanket and wait for it to cool down. When the blanket and remote control have cooled down you can turn the product back on again.




If you leave your blanket at any point while it is turned on, please leave it completely open on a flat surface.

CAUTION

Do not leave your blanket folded or crumpled, whilst it is turned on.

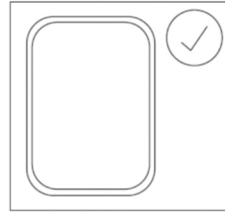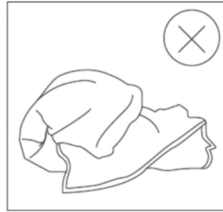

To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and do not try to pull the controller plug out without lifting the locking tab as you will damage the socket. To connect the controller lift the locking tab up with your finger and pull the plug directly in.

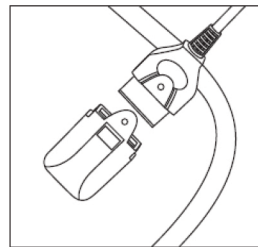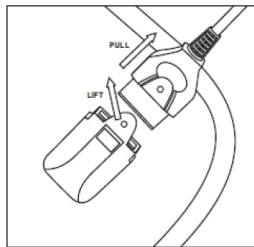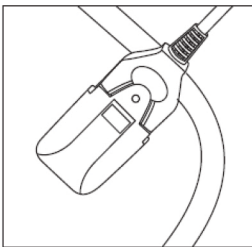

AFTER USE

When the blanket is not in use, please switch the controller to the off position; remove the plug from the power socket. If the blanket is not to be used for a long period of time, store the blanket in a cool and dry place.

CLEANING & MAINTAINANCE

When not in use and before cleaning the blanket, disconnect it from the mains.

Disconnect the controller from the blanket.

- Do not immerse the controller/s in water or get them wet.
- Clean the surface of the cord with neutral detergent if the cord is dirty and wipe it dry with soft cloth.
- Do not dry clean this blanket as it could damage the heating elements.
- Do not use industrial solvents such as benzene, kerosene or similar solvents to clean it.
- To clean the blanket, hand wiping it down with a soft damp cloth with very mild detergent, mildly process at a maximum washing temperature 30°C. Allow it to dry thoroughly before using or storing it. When washed, drape it over a clothes line to dry. Do not use clothes pegs to secure it.

- Machine washing of the blanket is possible; however, hand wiping it down will prolong the life of the blanket. To machine wash, remove the controller/s and place the blanket in a net bag and seal it. Use a small amount of detergent and set the washing machine to a “Delicate Wash” with a maximum temperature of 30°C. When washed, remove the blanket from the net bag and drape it over clothes line to dry. Do not use clothes pegs to secure it.
- Do not wring out the blanket.
- Do not dry using a tumble dryer.
- Do not iron the blanket.
- Do not dry the blanket in the sun
- Do not connect it to the mains supply to dry it.
- Do not use an appliance such as a hair dryer to dry it.
- Allow the blanket to dry naturally.
- Do not use the blanket if it is damp or wet.
- Do not try to repair the blanket if faulty- have it looked at by a qualified person.

- Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and seek specialist advice.
- if the mains lead or controller is damaged, do not open or attempt to repair them as they must be serviced by a qualified person, do not open or attempt to repair them as they must be serviced by a qualified person.

STORAGE

- When not in use, allow it to cool down before folding, disconnect the controller/s from the blanket, then gently, fold the blanket and place back into the packing bag it arrived in.
- Make sure the blanket is dry before folding and packing it away. The blanket should be hung in a ventilated location to dry naturally.
- Do not use mothproofing agents on the blanket.
- Insulation of the blanket will be damaged if the blanket is dried under the sun, ironed or when mothproofing agents are used. Damage on the insulation material will cause safety problem.

- Do not crease the appliance by placing items on top of it during storage.
- The blanket should be stored in a cool dry place.

TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
"C" appearing on the screen.	The controller has been placed under or inside the blanket and it has overheated. As a safety measure, the electric blanket has turned off.	Turn the controller OFF, unplug the electric blanket, lay it down completely flat and leave to cool down. Then restart the controller.
No Power to Controller. Or "P" appearing on the screen.	Possible that the controller or connector is not connected properly.	Please turn the controller off and reconnect the controller and/or connector properly. If you can not troubleshoot, it means the internal connection of the electric blanket is broken. Need to be overhauled or scrapped.
No Indicator Lights showing on Front Display when a heat or time setting is selected. Or "E" appearing on the screen.	The blanket has been used while folded or crumpled and it has overheated. As a safety measure, the electric blanket has turned off.	Turn the controller OFF, unplug the electric blanket, lay it down completely flat and leave to cool down. Then restart the controller.
	The blanket has been used while seriously folded or crumpled and it has overheated, the heating element has been damaged. The controller blown the Over-Temp thermal fuse.	Need to be scrapped.
Indicator Lights showing on Front Display but blanket is not heating.	Detachable Plug from Controller to Blanket is not fitted correctly or has come loose.	Ensure the detachable plug is fitted correctly into the socket on the blanket.
	When selected at "H" high temperature setting, the temperature setting will automatically revert to "L" low temperature setting after 1 hour so as to avoid overheating which	Re-select at "H" or "7" temperature setting.

	may cause discomfort.	
	The selected heat setting is too low.	Increase the Heat setting.
	Pre-heat time is too short.	Allow the Electric Blanket more time to heat up. More time is required depending on the ambient temperature.
	Blanket not in contact with body.	The blanket may not feel warm to touch unless it is wrapped around your body. Areas of the blanket not in contact will stay cool.
The controller is Warm to Touch.	This is normal.	Nothing to do. It is no cause for alarm.

SPECIFICATION

Power supply:	220 to 240V~50/60Hz
Power Consumption:	120W
Size :	160 x 130 CM
Warranty :	1 Year
Certifications:	CE, UKCA, Rohs

DISPOSAL OF THIS DEVICE



At the end of the product life cycle, you should not throw this machine into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment.

