 




# LUXURY ELECTRIC UNDERBED BLANKET

MODEL NO. : PM 150

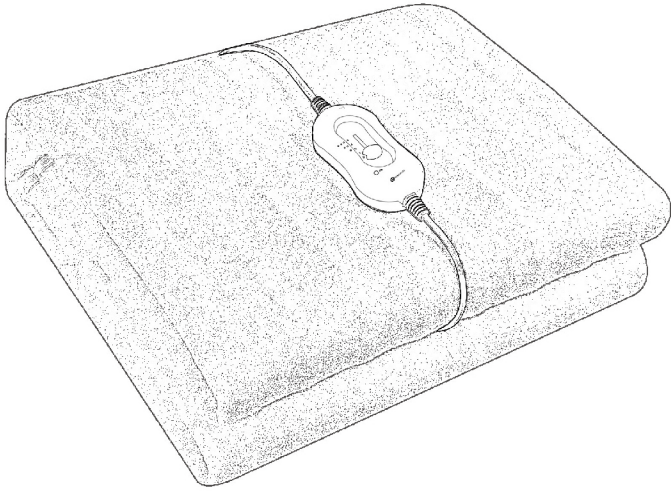

## INSTRUCTION MANUAL

PLEASE READ THESE INSTRUCTIONS BEFORE USE AND RETAIN THEM FOR FUTURE REFERENCE.

# **SAFETY PRECAUTION**

## **WARNING!**

Ensure that all safety precautions are followed when using electrical appliances for the proper operation of the device. This instruction booklet describes the safety precautions to be observed during operation to prevent injuries to yourself, other persons and damage to the device. The content not only is suitable for this product but also suitable for electrical appliances in general.

### **To reduce the risk of personal injury or damage to property, basic important safety instructions must be observed including the following:**

Read the instruction manual thoroughly and retain for future reference. Ensure before you know how the electric blanket works & how to operate it.

- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the electric blanket is not in use or before cleaning.
- Always use the electric blanket from a power outlet of the voltage (A.C. Only) marked on the rating label.
- Use only the type of controller marked on rating label.
- Use only as under blanket.
- Do not use if it is damp or wet.
- This blanket is not intended for medical use in hospitals.
- Do not use together with another heating appliance.
- When in use ensure the blanket & mains leads do not get trapped.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and contact PureMate Customer Service.
- If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- The appliance is not to be used by young children unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.

## **SYMBOL EXPLANATION**

---



Read the instructions for use



Maximum washing temperature 40°C, mild process  
(for models with detachable controller)



Do not dry clean



Do not bleach



Do not tumble dry



Do not iron



Do not insert pins



 
Do not use folded or rucked



Not to be used by very young children (0-3 years)

# FITTING ELECTRIC BLANKETS

1. Unfold the blanket and put it on the bed above your mattress.
2. Align the blanket, so that the socket for the lead and controller are at the foot of the bed.
3. Use the support ties to secure the product to the mattress. as shown in the figure below:

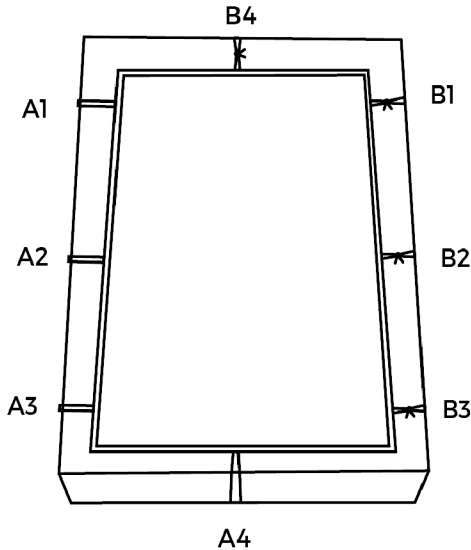

4. Take the support tie at point A1 and place it underneath the mattress to connect it to the support tie at point B1 with a secure knot. Repeat this with the support ties from A2 to B2, A3 to B3 and A4 to B4.
5. Ensure that your electric blanket is positioned correctly.
6. Once the blanket is secure, connect the controller to the mattress, by plugging it into the socket.
7. Place your bedsheet over the electric blanket.

# USING THE ELECTRIC BLANKET

**Connect the controller to the blanket, simply hold the socket with one hand and push the controller plug all the way until the locking tab locates over the plug on top of the controller plug.**

- Ensure there is a mains supply nearby and that when in use, the mains lead will not cause a tripping hazard. When plugged into the mains supply, the controller must be within easy reach of the user.

 
- Do not cover the controller and do not exert pressure on the controller.

- 1) Please select '3' on the controller to preheat for 30-60 minutes before using.
- 2) Select the desired heating setting '1-2-3'.

If using during sleep or for long periods of time, please set at "1" which is the lowest setting to avoid overheating which may cause discomfort.

## Connecting and removing the controller


To remove the controller, lift the locking tab up with your finger and pull the plug directly out. Do not pull the controller cable and do not try to pull the controller plug out without lifting the locking tab as you will damage the socket. To connect the controller lift the locking tab up with your finger and pull the plug directly in.

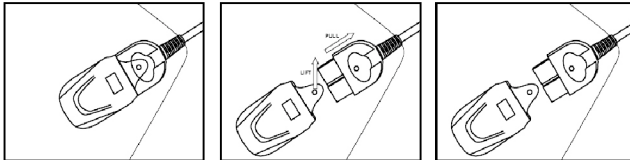

## After use

When the blanket is not in use, please switch the controller to the off position;; remove the plug from the power socket. If the blanket is not to be used for a long period of time, store the blanket in a cool and dry place.
 
# CONTROLLER

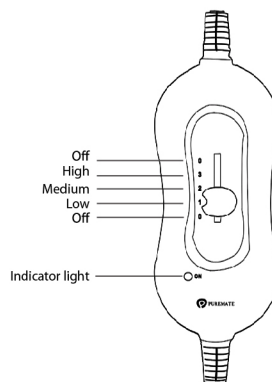

# **CLEANING & MAINTAINANCE**

When not in use and before cleaning the blanket, disconnect it from the mains.

**Disconnect the controller from the blanket.**

- When not in use and before cleaning the blanket, disconnect it from the mains.
- Disconnect the controller from the blanket.
- Do NOT immerse the controller in water or get them wet.
- Clean the surface of the cord with neutral detergent if the cord is dirty and wipe it dry with soft cloth.
- Do NOT dry clean this blanket as it could damage the heating elements.
- To clean the blanket, wipe it down with a soft damp cloth with very mild detergent. Allow it to dry thoroughly before using or storing it.
- Do NOT use industrial solvents such as benzene, kerosene or similar solvents to clean it.
- Machine washing of the blanket is possible; however, hand wiping it down will prolong the life of the blanket. To machine wash, remove the controller/s and place the blanket in a net bag and seal it. Use a small amount of detergent and set the washing machine to a "Delicate Wash" with a maximum temperature of 40°C. When washed, remove the blanket from the net bag and drape it over a clothes line to dry. Do NOT use clothes pegs to secure it.
- Do NOT wring out the blanket
- Do NOT dry using a tumble dryer
- Do NOT iron the blanket
- Do NOT connect it to the mains supply to dry it
- Do NOT use an appliance such as a hair dryer to dry it
- Allow the blanket to dry naturally.
- Do NOT use the blanket if it is damp or wet.
- Do not try to repair the blanket if faulty – please contact PureMate Customer Service
- Examine the blanket frequently to check that there are no signs of wear or damage. If any damage/wear is spotted, do not use the blanket and seek specialist advice.
- If the mains lead or controller is damaged, do not open or attempt to repair them as they must be serviced by a qualified person. Please contact PureMate Customer Service.

# **STORAGE**

- When not in use, allow it to cool down before folding, disconnect the controller/s from the blanket, then gently fold the blanket and place back into the packing bag it arrived in.
- Make sure the blanket is dry before folding and packing it away. The blanket should be hung in a ventilated location to dry naturally.
- Do not use mothproofing agents on the blanket.
- Insulation of the blanket will be damaged if the blanket is dried under the sun, ironed or when mothproofing agents are used. Damage on the insulation material will cause safety problem.
- Do not crease the appliance by placing items on top of it during storage.
- The blanket should be store in a cool dry place.

# **SPECIFICATION**

|                    |   |
|--------------------|---|
| Power supply:      | 220 to 240V~50/60Hz                             |
| Power Consumption: | 45W [Single], 75W [ Double ] , 2 x 60W [ King ] |
| Single Size :      | 135 x 65 CM                                     |
| Double Size :      | 135 x 120 CM                                    |
| King Size :        | 165 x 137 CM                                    |

# **DISPOSAL OF THIS DEVICE**



At the end of the product life cycle, you should not throw this machine into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment.





LUXURY ELECTRIC BLANKET | **Model NO: PM 150**

Super Tech Health Limited  
129 Shady Lane  
Great Barr  
Birmingham  
West Midlands  
B44 9ER  
United Kingdom

**WWW.PUREMATE.CO.UK**

© Copyright 2021