



MINI DESKTOP TOWER FAN

MODEL NO: PM713



INSTRUCTION MANUAL

WARNING: To avoid damage, please ensure the item is placed on a flat and sturdy surface.

Thank you for purchasing the innovative PureMate Mini Desktop Tower Fan We wish you many years of healthy indoor air with this efficient and effective product.

SAFETY GUIDELINES


! WARNING

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE


- Use the appliance only on the voltage specified.
- Do not plug in the appliance until it has been correctly assembled.
- Unplug the appliance before dismantling, moving or before cleaning.
- Do not use around heated surfaces, open flames or flammable substances.
- Do not immerse in water or other liquids. Do not use near water.
- Do not leave the appliance unattended around children.
- Do not insert any objects or fingers into any openings.

- Use for indoors only.
- Do not run the cord under throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- Do not operate if there are signs of damage to the cord, plug or appliance. Do not attempt to repair or adjust any electrical or mechanical functions on this unit. Please Call Customer Service for assistance.
- Do not use the appliance for any other purpose than its intended use, as described in the manual.
- Always ensure the appliance is placed on a flat, stable and suitable surface.
- Do not cover or restrict airflow to the inlet or outlet grills.
- Never unplug the appliance from the mains until it has been switched off.
- Unplug the fan and store in a dry, safe place when not in use.

COMPONENTS

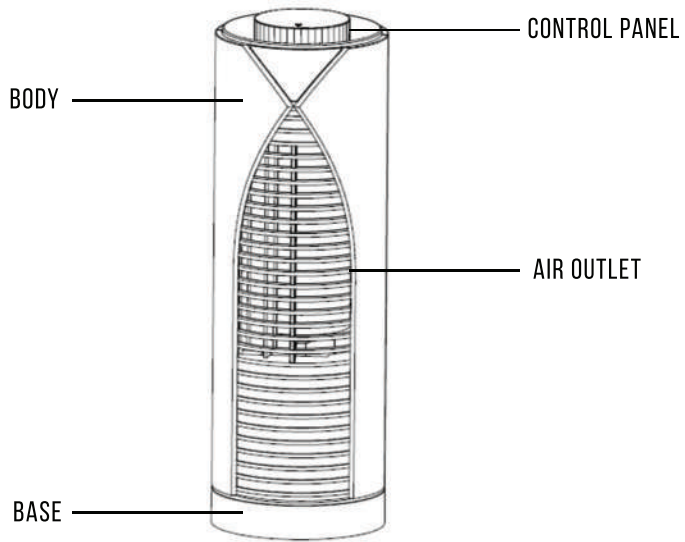


CONTROL PANEL

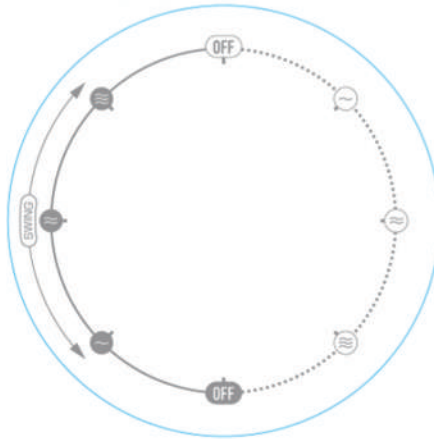

OPERATING INSTRUCTIONS

Before using the fan make sure that it is on a flat and stable surface. Damage may occur if it is place on an incline or decline.


- Plug the cord set into outlet.
- Turn the dial to align with the desired selection.

 - Off

 - Low Fan Speed

 - Medium Fan Speed

 - High Fan Speed

 - Off

 - Low Fan Speed with Oscillation

 - Medium Fan Speed with Oscillation

 - High Fan Speed with Oscillation

CLEANING AND MAINTENANCE

- Always disconnect the cord from the electrical outlet when cleaning your fan.
- Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
- Avoid the use of gasoline, benzene, thinner etc including other abrasive and harsh chemicals as they may result in damage to the fan.
- Store the fan in a clean dry place when not in use.

WARRANTY & SERVICE

This product is covered with PureMate product and labour warranty for 12 months from the date of its original purchase. If any problems occur, please contact the PureMate Customer Care Centre in your country via the contact information listed in this User Guide. We can only provide after sales service for products that are sold by PureMate or PureMate authorized retailers and distributors. If you have purchased your unit from a different place, please contact your seller for return and warranty issues.

SPECIFICATION

MODEL NO: PM713

Voltage: 220-240V~50Hz

Power: 20W

Certifications: CE, UKCA, Rohs

Product Size: 11 x 11 x 32.5 CM

Warranty: 1 Year

Net Weight: 1.27 Kg

DISPOSAL OF THIS DEVICE



At the end of the product life cycle, you should not throw this machine into the normal household garbage but ring the product to a collection point for the recycling of electrical and electronic equipment.

FIND US ONLINE





MINI DESKTOP TOWER FAN | MODEL NO: PM713

Super Tech Health Limited
129 Shady Lane
Great Barr
Birmingham
West Midlands
B44 9ER
United Kingdom

WWW.PUREMATE.CO.UK

© Copyright 2021