


MODEL NO: PM 820

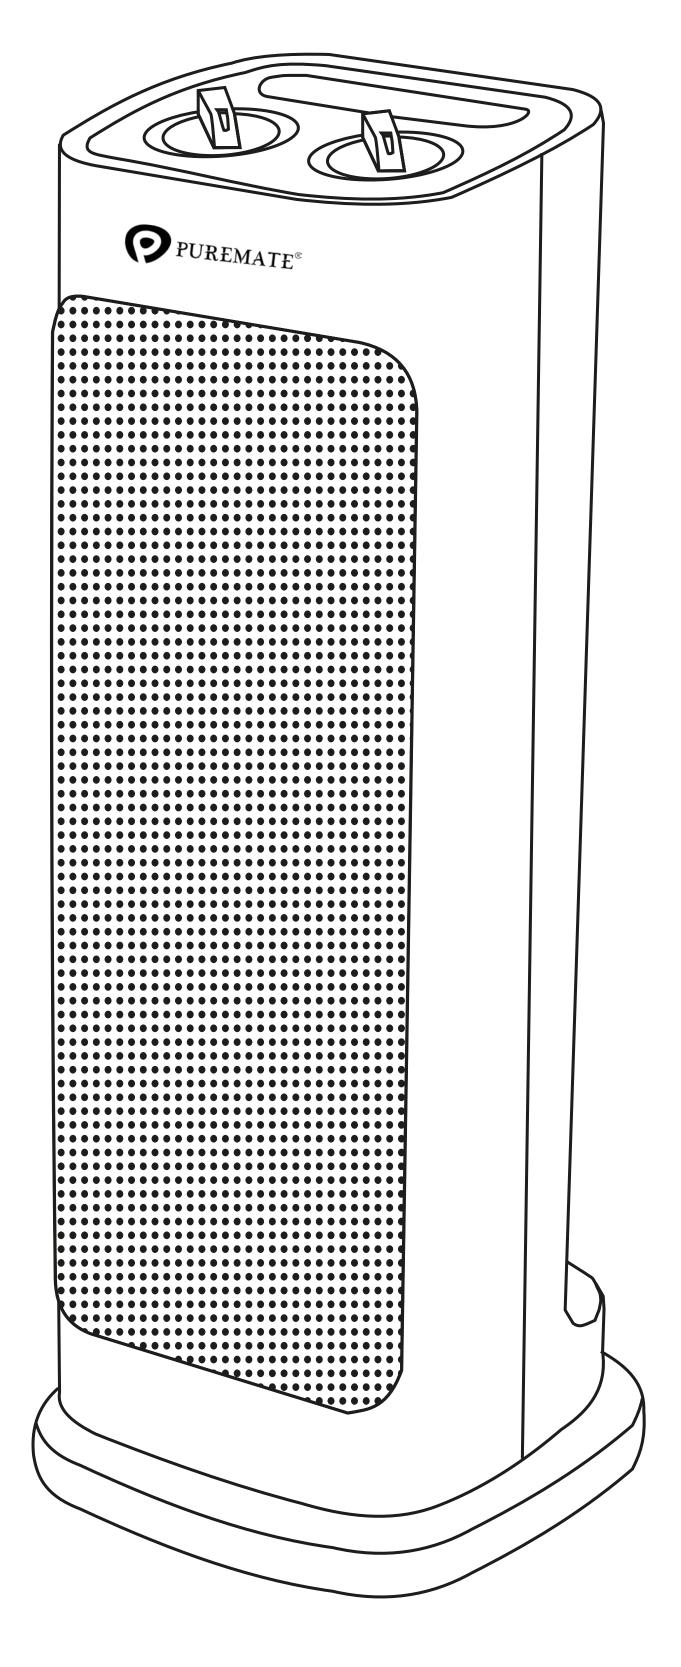

# INSTRUCTION MANUAL

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS.

This product is only suitable for well insulated spaces or occasional use.

Thank you for purchasing the innovative product the PureMate Ceramic tower Heater. We wish You many years of warmth with this efficient and effective product.

#### SAFETY PRECAUTIONS

When using electrical appliances, basic safety Precautions should always be followed including the Following.

#### Read and Follow all Instructions Carefully:

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

- This appliance can be used by children aged from 8 Years and above and persons with reduced physical, Sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or Instruction concerning use of the appliance in a safe Way and understand the hazards involved. Children Shall not be made by children without supervision.
- Children of less than 3 year should be kept away unless Continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the Appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the Hazards involved. Children aged from 3 year and less Than 8 years shall not plug in, regulated and clean the Appliance or perform user

- CAUTION Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Warning: In order to avoid overheating, do not cover the heater. The meaning of figure in marking is "DO NOT COVER".
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance only for household use.
- WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Do not use this heater if it has been dropped.

- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
- CAUTION if using an extension lead please ensure you do not exceed the maximum rated running wattage/load of the extension lead.
- Disconnect from mains when not in use or when moving or cleaning.
- The heater is hot when in use .To avoid burns, do not let bare skin touch hot surface.

# Temperature Control Dial Handle Power Selection Dial

#### OPERATING INSTRUCTIONS

Tip Over

Switch

 Before using the heater make sure that it is on a flat and stable surface. Damage may occur if it is placed on an incline or decline.

Safety Grill and

**Heat Outlet** 

- Turn off all the controls of the heater, and then plug directly into a standard grounded AC outlet.
- To activate the heater, turn the Power&Oscillation knob to below position for required function:

| "OFF" : Off                | "HI" : Hot wind-Maximum power           |
|----------------------------|---|
| "# : Fan only              | "LO&OSC" : Oscillation under Low power  |
| "LO" : Warm wind-low power | "Hl&OSC" : Oscillation under High power |

- Turn the thermostat switch clockwise or anti-clockwise to set the desired temperature you require. The thermostat switch will keep the room temperature at the desired level automatically.
- To completely shut the heater off, turn all the switches to off, and remove plug from the socket-outlet when not in use.

Note: Do not force knob beyond its normal stop position.

# TIP-OVER PROTECTION

This heater is protected with a safety switch that turns off the appliance automatically when the heater falls over, or is at an excessive angle from the horizontal. This helps prevent accidents, and the heater will resume operation when it is put back upright.

#### OVERHEAT PROTECTION

This heater is protected with overheat protection that switches off the appliance automatically in case of severe overheating. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove any possible cause of overheating, eg. something covering the heater. Check for damage to the appliance, the cord and the plug. If there is no damage, plug the unit back in and switch it on as described above. If the heater still does not turn on, please contact Customer Service for assistance.

#### CLEANING & MAINTENANCE

- Always remove the plug from the socket-outlet and allow the heater to cool down before clean it.
- Wipe the exterior surface of the heater occasionally with a soft damp cloth (not dripping wet) and dry the exterior surface before operating the heater.

#### **WARNING:**

DO not immerse the heater in water.

DO not use any cleaning chemicals such as detergents and abrasives.

DO not allow the interior to get wet as this could create a hazard.

- To store away the heater, put the heater back into its original package and store it in a clean dry place.
- In case of malfunction or doubt, do not try to repair the heater by yourself, it may result in a fire hazard or electric shock.

#### **SPECIFICATIONS**

| odel No:           | PM820                 |  |
|--------------------|-----------------------|--|
| ated Voltage:      | 220-240V~50Hz         |  |
| ower Consumption:  | 2000W                 |  |
| roduct Dimensions: | 18.4 x 16.8 x 46.6 cm |  |
| ox Dimensions:     | 21.7 x 20 x 50.5 cm   |  |
| et Weight:         | 2.2 Kgs               |  |
| ross Weight:       | 2.6 Kgs               |  |

# DISPOSAL OF THIS DEVICE



Waste electrical products should not be disposed of with household waste. Some chemicals contained within electrical/electronic products or batteries can be harmful to health and the environment. Please recycle where facilities exist. Check with your local authority or ocal store for recycling advice.


# FIND US ONLINE









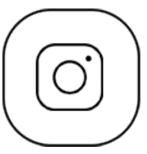



| Model No: PN                           | 1820    | T   |      |  |         |
|--|---------|---|------|--|---------|
| ltem                                   | Symbol  | Value   | Unit | Item   | Unit    |
| Heat output                            |         |   |      | Type of heat input, for electric storage local heaters only (sele            | -       |
| Nominal<br>heat output                 | PNOM    | 1.8   | KW   | manual heat charge control, with integrated thermostat                       | No      |
| Minimum<br>heat output<br>(indicative) | P MIN   | 1.0   | KW   | manual heat charge control with room and/or outdoor temperature feedback     | No      |
| Maximum<br>continuous<br>heat output   | Р мах,с | 1.8   | KW   | electronic heat charge control with room and/or outdoor temperature feedback | No      |
| Auxiliary electricity consumption      |         |   |      | fan assisted heat output   | No      |
| At nominal heat output el MAX N/A KW   |         | Type of heat output/room temperature control (select one) |      |  |         |
| At minimum<br>heat output              | el min  | N/A   | KW   | single stage heat output and no room temperature control                     | No      |
| In Stand by<br>Mode                    | el sb   | 0   | KW   | Two or more manual stages, no room temperature control                       | No      |
|  |         |   |      | with mechanic thermostat room temperature control                            | YES     |
|  |         |   |      | with electronic room temperature control                                     | No      |
|  |         |   |      | electronic room temperature control plus day<br>timer                        | No      |
|  |         |   |      | electronic room temperature control plus<br>week timer                       | No      |
|  |         |   |      | Other control options (multiple selections pos                               | ssible) |
|  |         |   |      | room temperature control, with presence detection                            | No      |
|  |         |   |      | room temperature control, with open window detection                         | No      |
|  |         |   |      | with distance control option   | No      |
|  |         |   |      | with adaptive start control  | No      |
|  |         |   |      | with working time limitation   | No      |
|  |         |   |      | with black bulb sensor   | No      |



#### CERAMIC TOWER HEATER | Model NO: PM 820

Super Tech Health Limited 129 Shady Lane Great Barr Birmingham West Midlands B44 9ER United Kingdom

#### WWW.PUREMATE.CO.UK