




42-Inch Bladeless Tower Fan With Air Purifier

MODEL NO: PM-742

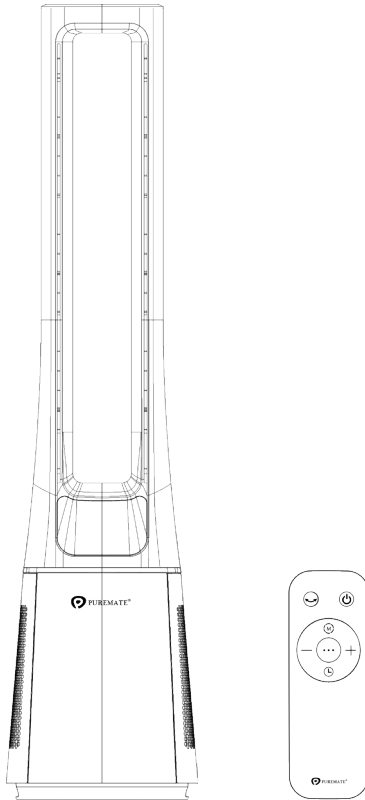




INSTRUCTION MANUAL

⚠ WARNING!

Ensure that all safety precautions are followed when using electrical appliances for the proper operation of the device. This instruction booklet describes the safety precautions to be observed during operation to prevent injuries to yourself, other persons and damage to the device. The content not only is suitable for this product but also suitable for electrical appliances in general

Do Not Use This Bladeless Tower Fan Until You Have Read This Entire Manual Thoroughly and Keep in a safe place for future reference.

SYMBOLS EXPLAINED

	For indoor use only.		Please read instruction manual and retain for future use.
	Equipment complies with the applicable EU safety requirements and regulations.		

IMPORTANT!

Do Not Use This Tower Fan with Air Purifier Until You Have Read This Entire Manual Thoroughly and Keep in a safe place for future reference.

This product is only suitable for well insulated spaces or occasional use.

THANK YOU

F O R B E I N G O U R C U S T O M E R

Thank you for purchasing the innovative product the PureMate 42 Inch Bladeless Tower Fan with Air Purifier. We wish you many years of healthy air with this efficient and effective product.

SAFETY OPERATION


- Ensure that all safety precautions are followed when using electrical appliances for the proper operation of the safety device. This instruction booklet describes the safety precautions to be observed during operation to prevent injuries to yourself, other persons and damage to the device. The content not only is suitable for this product but also electrical appliances in general.

SAFETY INSTRUCTIONS

- To avoid fire or shock hazard, plug the appliance directly into a 220-240V AC electrical outlet.
- Disconnect the power plug before dismantling, assembling or before cleaning.
- Keep unit away from heated surfaces and open flames.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Children cannot recognize the hazards associated with the usage of electrical appliances. For this reason, always supervise children when they are near the unit.
- Always unplug the tower fan before moving , cleaning or whenever the tower fan is not in use. Be sure to pull by the plug and not the cord.
- NEVER drop or insert any object into any openings.

- DO NOT run cord under carpeting. DO NOT use outdoors.
- DO NOT cover cord with throw rugs, runners, or similar coverings.
- DO NOT route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Please Call Customer Service for assistance.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- Do not operate the appliance with wet hands, in order to avoid damage.
- DO NOT knock or shake the body of the tower fan when in use, otherwise it may cause the item to stop.
- NEVER insert fingers, pencils or any other objects through the guards.
- DO NOT use the appliance for any other purpose than its intended use.
- The fan must not be used if the casing is damaged or open.

COMPONENTS

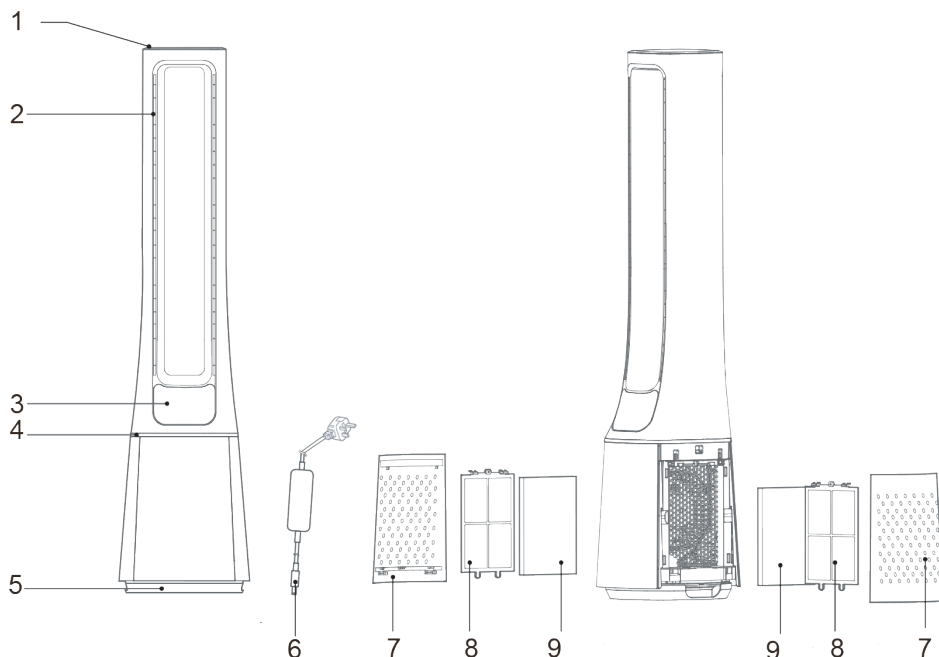

1: Top cover

2: Air outlet

3: Display and Control panel

4: Ambient light

5: Base


6: Adapter

7: Air inlet grille

8: Pre-filter


9: HEPA filter


CONTROL PANNEL

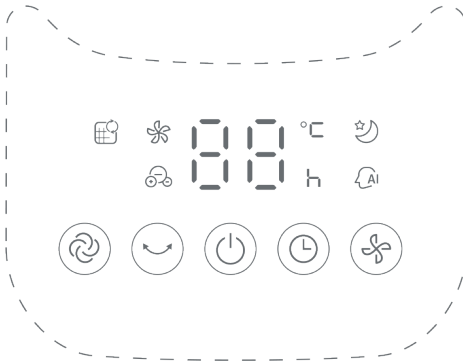




 Startup/Standby



 Touch this button to switch the wind mode among normal, plasmacluster, sleep and AI smart. (When the filter replacement light is on, press and hold this button to turn off the reminder light)

 Touch this button to start/stop the swing.

 Touch this button to switch the wind speed (cycles among level 1-2-3-...-10-1-2).

 Schedule to shut down in the power-on state, and schedule to start up in the standby state; Touch this button to set the timer display cycles among 0-1-2-...-12-0h); 0h means that the timer is canceled.

 Filter replacement reminder icon; when the icon  stays on, the filter needs to be replaced;


 In AI smart wind mode, the indicator light  is on, and the wind power is automatically adjusted according to changes in ambient temperature.

☆) This indicator light is on in sleep wind mode.
Start the sleep wind function, and the fan automatically adjusts the level according to the program; there are three levels: 1, 2 and 3; you can adjust the level of the sleep wind by pressing the wind speed button.

88 °C
h This icon displays the wind speed level or set timer, and displays the temperature in the wind mode.

Ⓐ) This indicator light is on in ion wind mode.
In this mode, plasmacluster is turned on, and level 1~10 wind has plasmacluster.


REMOTE CONTROL

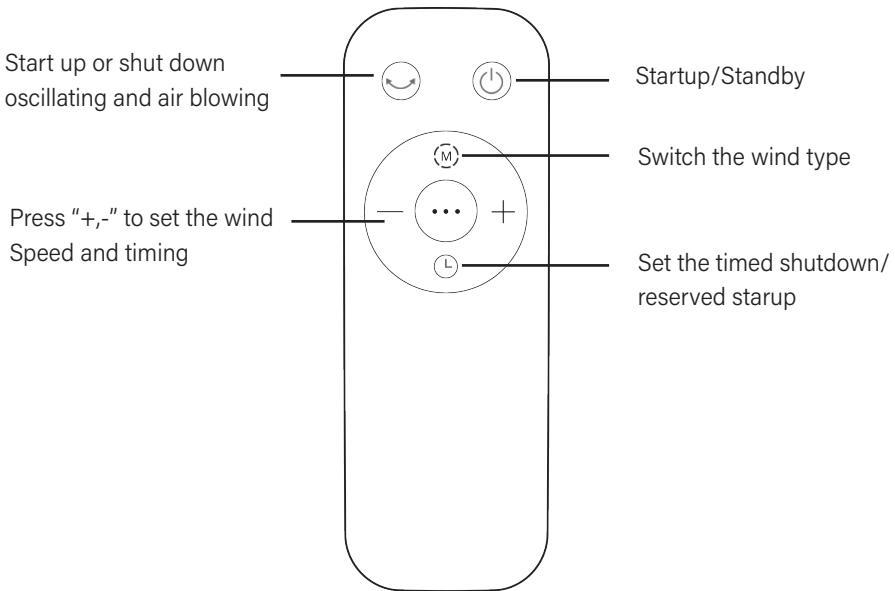

NOTE:

- The remote control should be normally used within 5 metres of the front of the product and 30 degrees of the deviation angle.
- The battery contains many heavy metals, acids and bases, etc., which may threaten human's health; Waste batteries should be recycled separately.

REMOTE CONTROL BATTERY INSTALLATION

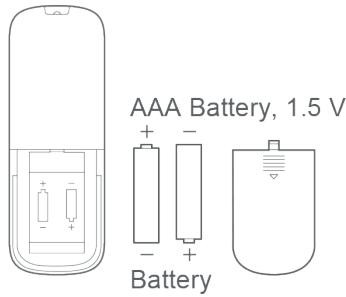

Use manganese or alkaline batteries of type **"AAA"**.
Do not use rechargeable batteries.

FILTER REPLACEMENT


1 Filter



- 2 When the indicator light for replacement of filter is on, the prompt that reminds you of filter replacement will appear. If it is not replaced in time, the prompt will appear during each startup.



3 Replace a new filter

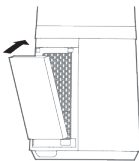


- 4 Long press the mode button for 3 seconds to turn off the indicator light for filter replacement.




FILTER INSTALLATION


1 Remove the air inlet grille

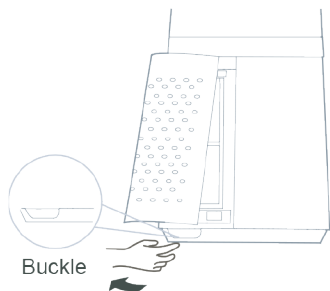


2 Take out the pre-filter
Press the raised part on both sides to pull it outwards, and take out the pre-filter.

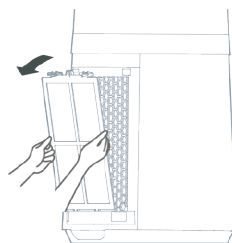


3 Remove the protective film of the filter.

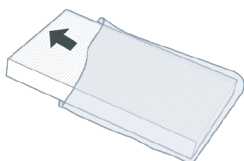


4 Install the HEPA filter

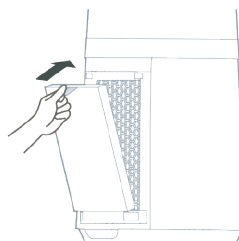


5 Install the pre-filter
Align the slot position at the bottom, and buckle up the upper U-shaped buckle.

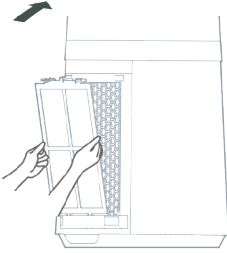


6 Install the air inlet grille
Align the upper two buckles and press them tightly, then press the two sides at lower part, slowly and gently buckle the air inlet grille.

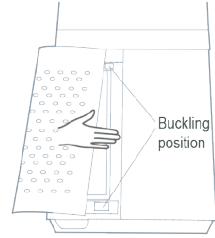

7 Install the adapter, Tighten the plug with the socket position of the base

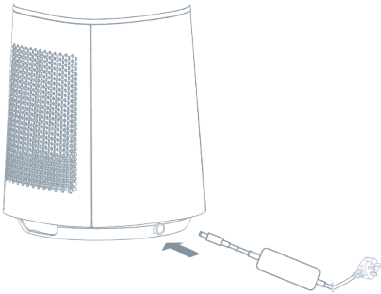

8 Plug power supply

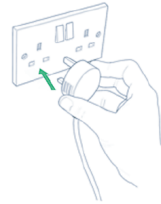


It is recommended to clean the filter once every two weeks and replace it once every six months (the cleaning and replacement cycle can be adjusted according to the use environment).


CLEANING & MAINTENANCE

Pre-Filter cleaning


1 Unplug the power cord

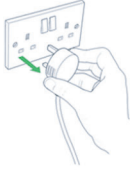


2 Take out the filter

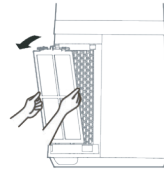

3 Remove the dust with vacuum cleaner

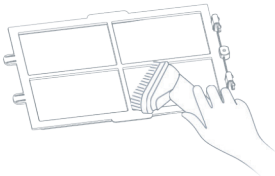

4 Install the machine in reverse order and plug power supply

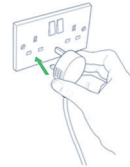

CLEANING & MAINTENANCE

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

- 1.** Before cleaning and assembling, fan must be unplugged.
- 2.** To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
- 3.** Please wipe the exterior parts with a soft cloth soaking a mild detergent.
- 4.** Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
- 5.** Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

CAUTION! Do not immerse the unit in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.

WARRANTY & SERVICE



Items purchased directly with PureMate, or one of our approved resellers, you will automatically register your warranty for 1 (ONE) year. You do not require to register again for your warranty. All warranties will execute our terms and conditions you will find these via our website at

www.puremate.co.uk

SPECIFICATION

Model :	PM- 742
Rated Voltage :	24V ~ 1.5A
Power Consumption:	33W
Dimensions (L x W x H):	25.5 x 25.5 x 105.6 cm
Net Weight:	5.8 Kg
Certifications:	UKCA, CE, Rohs
Warranty:	1 Year

DISPOSAL OF THE DEVICE

	Waste Electrical and Electronic Equipment (WEEE)	This symbol on the product and/or packaging indicates that Waste Electrical product (WEEE) under Directive 2012/19/ EU which governs used electrical and electronic appliances, should not be disposed of with general household waste.
	The Mobius Loop	This symbol indicates that the product or packaging is capable of being recycled.

FIND US ONLINE





42-Inch Bladeless Tower Fan | MODEL NO: PM-742
With Air Purifier

Super Tech Health Limited
129 Shady Lane
Great Barr
Birmingham
West Midlands
B44 9ER
United Kingdom

WWW.PUREMATE.CO.UK