 




47-INCH OSCILATING DC TOWER FAN

MODEL NO: PM 750

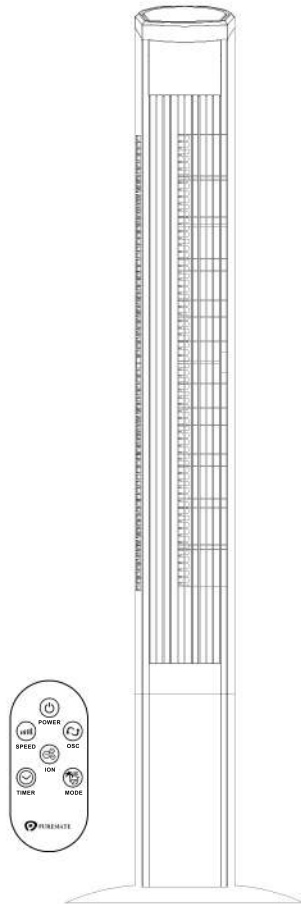

INSTRUCTION MANUAL

Thank you for purchasing the innovative PureMate 47-Inch Tower Fan PM750, we wish you many years of healthy and refreshing indoor air with this efficient and effective product.

SAFETY OPERATION

 
 
Ensure that all safety precautions are followed when using electrical appliances for the proper operation of the safety device. This instruction booklet describes the safety precautions to be observed during operation to prevent injuries to yourself, other persons and damage to the device. The content not only is suitable for this product but also electrical appliances in general.

SAFETY INSTRUCTIONS

- To avoid fire or shock hazard, plug the appliance directly into a 220-240V AC electrical outlet.
- Disconnect the power plug before dismantling, assembling or before cleaning.
- Keep unit away from heated surfaces and open flames.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Children cannot recognize the hazards associated with the usage of electrical appliances. For this reason, always supervise children when they are near the unit.
- Always unplug the tower fan before moving it, cleaning or whenever the tower fan is not in use. Be sure to pull by the plug and not the cord.
- NEVER drop or insert any object into any openings.

- DO NOT run cord under carpeting. DO NOT use outdoors.
- DO NOT cover cord with throw rugs, runners, or similar coverings.
- DO NOT route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Please Call Customer Service for assistance.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- Do not operate the appliance with wet hands, in order to avoid damage.
- DO NOT knock or shake the body of the tower fan when in use, otherwise it may cause the item to stop.
- NEVER insert fingers, pencils or any other objects through the guards.
- DO NOT use the appliance for any other purpose than its intended use.
- The fan must not be used if the casing is damaged or open.


COMPONENTS

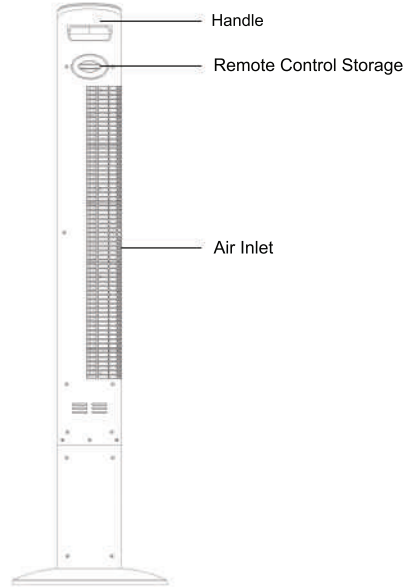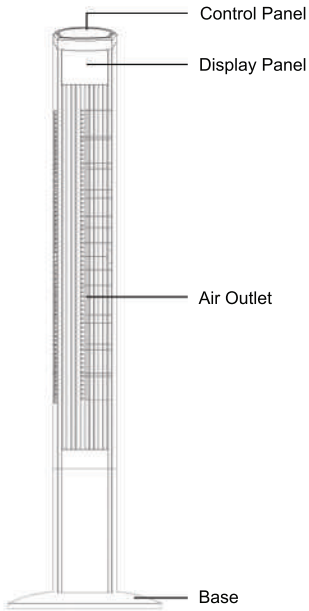


CONTROL PANEL



 REMOTE CONTROL

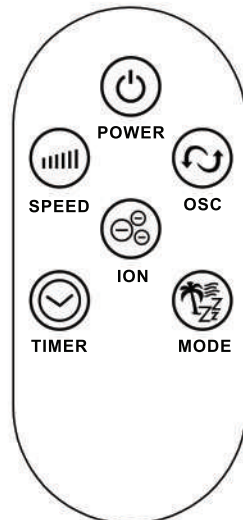


ASSEMBLY INSTRUCTIONS

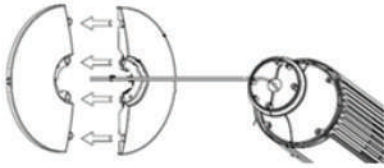 

Attach the two components of the base to each while pulling the cable through the middle.

 
Then push the two parts into each other, making sure that they click into place.

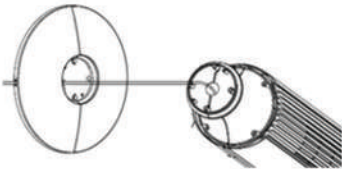

Place the base on the fan housing and gently pull the power cord through the opening of the base.



 Attach the base to the fan housing by using the four provided wing nuts (**A**).

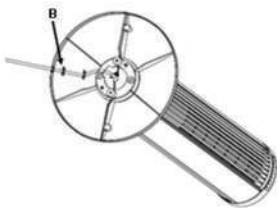

Finally pass the power cable on the bottom of the stand through the cable fixation (**B**) and into the opening provided on the side of the pedestal to the outside. This ensures a safe position of the fan and a strain relief of the power cable.

OPERATING INSTRUCTIONS



POWER: Turns the tower fan ON/OFF

- Press the POWER button. The device starts operating.
- Press POWER again and the device will stop working and display the room temperature.



SPEED: Press to adjust between 12 fan speeds.



MODE: Press to choose between 4 different modes:



NORMAL MODE: Fan will blow continuously at the speed selected.



NATURAL MODE: Fan will cycle through the 12 speed settings. Fan speed cannot be adjusted.



SLEEP MODE: Fan speed can be selected, after 15 minutes the fan speed will lower by 1 speed.



ECO MODE: Fan speed will be selected dependent on temperature. 20° or under speed 2, 21-25° speed 6, 26-30° speed 10, 31° or higher=speed 12.



OSCILLATION: Press to start oscillation. Press again to stop oscillation.



TIMER:

AUTO TURN OFF:



- When the fan is power on, press the timer button to select the number of hours during which you would like the device to run 1-12 hours, before it stops automatically.

AUTO TURN ON:

- When the machine is in standby mode, press the timer button during 3 seconds (Delay start indicator lights on to select the desired number of hours (1-24 hours) before the unit turns on automatically in speed 1 and works during 6 hours.

The fan is equipped with an ionizer. This distributes ionized air into the rooms and removes static electricity.

To start the ionizer function please proceed as follows:

 
- CONTROL PANEL: Press the  button for 3 seconds.
- REMOTE CONTROL: Press the  button.

REMOTE CONTROL:

- Requires 1pc CR2025 3V battery supplied in the remote control. Used batteries must be safely disposed..
- Respect the polarity when inserting.
- To direct it to the front of the fan.

BATTERY REPLACEMENT

1. Remove the battery holder by pressing the locking tab A with your thumb and pulling it out as per arrow B.
2. Replace the battery with the same type and the (+) side facing up.
3. Gently push in the holder until securely locked into place.

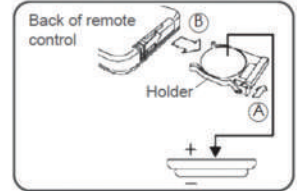

NOTE: The tower fan has an automatic energy-saving mode.

After each setting, the display will turn off the display after 180 seconds, it will come up again when use the remote or change setting from display.

CLEANING AND MAINTENANCE

- Always disconnect the cord from the electrical outlet when cleaning your fan.
- Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
- Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
- Avoid the use of gasoline, benzene, thinner etc as they may result in damage to the fan.
- Store the fan in a clean dry place when not in use.

CAUTION! Do not immerse the unit in water or allow water to drip into the interior of the fan housing as this could create a fire or electric shock hazard.

WARRANTY & SERVICE

Items purchased directly with PureMate, or one of our approved resellers, you will automatically register your warranty for 1 (ONE) year. You do not require to register again for your warranty. All warranties will execute our terms and conditions you will find these via our website at www.puremate.co.uk

SPECIFICATIONS

Model:	PM750
Rated Voltage:	220-240V, 50Hz
Power Consumption:	28W
Product Size:	32 x 32 x 120 cm
Net Weight:	3.10 kg
Certifications:	UKCA , CE , Rohs
Warranty:	1 Year

DISPOSAL OF THIS DEVICE



At the end of the product life cycle, you should not throw this machine into the normal household garbage but bring the product to a collection Point for the recycling of electrical and electronic equipment.

FIND US ONLINE





47-INCH OSCILLATING DC TOWER FAN | MODEL NO-PM 750

Super Tech Health Limited
129 Shady Lane
Great Barr
Birmingham
West Midlands
B44 9ER
United Kingdom

WWW.PUREMATE.CO.UK

© Copyright 2021