




2000W MICA Panel Space Heater

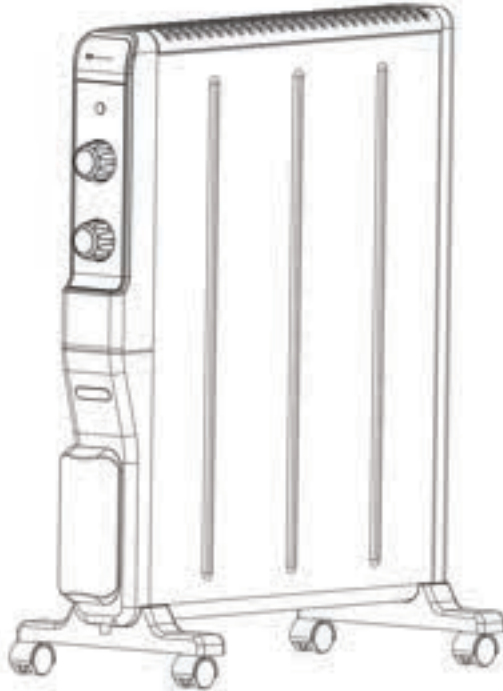

Model NO: PM830

INSTRUCTION MANUAL

This Product is only suitable for well insulated spaces or occasional use.

Thank You For Purchasing The Innovative Product the PUREMATE 2000W MICA Panel Space Heater. We Wish You Many Years Of warmth With This Efficient and Effective Product.

SAFETY PRECAUTIONS


When using electrical appliances, basic safety Precautions should always be followed including the Following.

Read and Follow all Instructions Carefully:

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.


CAUTION: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.
-  **WARNING:** In order to avoid overheating, do not cover the heater. The Meaning of figure in marking is “DO NOT COVER”.
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a Swimming pool.
- This appliance is only for household use.
- **WARNING:** Do not use this heater in small rooms when they are occupied by Persons not capable of leaving the room on their own, unless constant Supervision is provided.
- DO NOT USE this heater if it has been dropped.
- DO NOT USE if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as Applicable.

- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other Flammable material a minimum distance of 1m from the air outlet.
- DO NOT attempt to repair, disassemble or modify the appliance. There are no User-Serviceable parts inside.
- **CAUTION:** If using an extension lead please ensure you do not exceed the Maximum rated running wattage/Load of the extension lead.
- Disconnect from mains when not in use or when moving or cleaning.
- The heater is hot when in use. To avoid burns, do not let bare skin touch hot Surface.
- Allow the heater to completely cool before handling or cleaning it.
- Ensure the heater is in the “0” OFF position and the power cord is unplugged From the electrical outlet before cleaning the heater.
- DO NOT allow water or other liquids to run into the interior of the heater, as this Could create a fire and/or electrical hazard.
- DO NOT use any abrasive cleaners or solvents, as heater damage will occur.

COMPONENTS

- ① Top Cover
- ② Power Switch knob
- ③ Temperature Control knob
- ④ Cable Storage
- ⑤ Left Plastic Cover
- ⑥ Footbase
- ⑦ Wheels


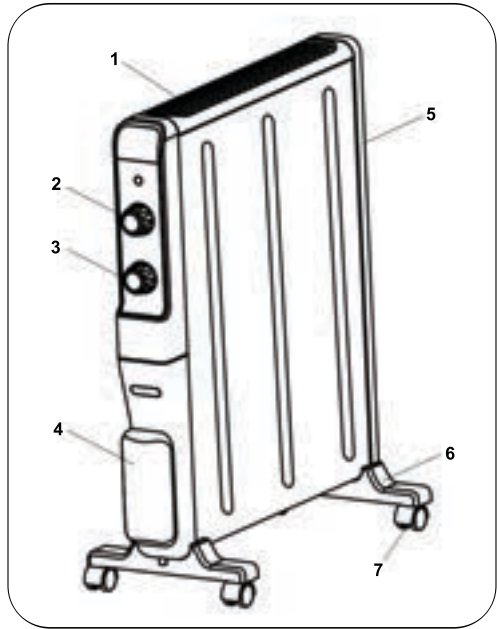


OVERHEAT PROTECTION: if the temperature of the heater Reaches to high, the thermostat will automatically switch Off the power and the heater will impede working. Once The heater has cooled, the heater can be used normally. This may occur during improper use or certain Enviroment conditions.

TIP-OVER PROTECTION: If the heater is knocked over or Tipped onto its side, the safety switch will automatically Disconnect power. Power will return to normal when the Unit has been placed upright onto a flat, even surface.

ASSEMBLY

1. Position the heater carefully upside down.
2. Place screws in center round hole of foot base and screw in tightly with a screwdriver.
3. Repeat for other leg.
4. Turn the heater the right way up.

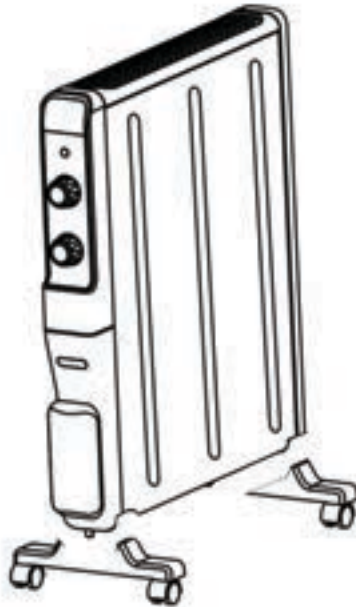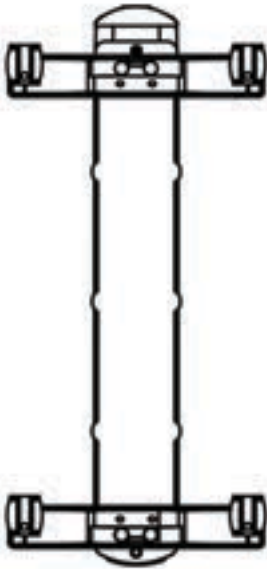

CAUTION: Only operate the heater when in its normal upright position with the Castor wheels fitted to the bottom of the unit.

OPERATING INSTRUCTIONS

1. Place the heater upright on a flat, steady and heat-resistant surface.
2. Turn the thermostat dial anti-clockwise to LOW and ensure the power switch is '0' OFF.
3. Insert the plug into a suitable socket.
4. Turn the power switch dial clockwise to the desired power:

I	(1000W) Low Heat
II	(2000W) High Heat

NOTE: Do not force knob beyond its normal stop position.

5. Turn the thermostat dial clockwise until you hear a click and the light turns on. Turning the thermostat clockwise will keep the heater on until the room gets warmer. Turning it anti-clockwise will turn it off until the room has cooled to a Lower temperature and then it will switch on. The heater automatically rotates through an on-and-off cycle to maintain the current room temperature according to the thermostat's setting. It is normal for it to heat up and cool down Periodically.
6. To turn off the heater, turn the power switch dial anti-clockwise to "0" OFF .
7. Unplug the heater from the electrical outlet when it is left unattended or is not in use.

CLEANING TIPS

- Clean the exterior surface of the heater by wiping it with a soft, damp cloth.
- Store the heater in a clean, dry place when it is not in use.

CAUTION

- Allow the heater to completely cool before handling or cleaning it.
- Ensure the heater is in the “0” OFF position and the power cord is unplugged From the electrical outlet before cleaning the heater.
- DO NOT allow water or other liquids to run into the interior of the heater, as this Could create a fire and/or electrical hazard.
- DO NOT use any abrasive cleaners or solvents, as heater damage will occur.

SPECIFICATION

MODEL:	PM830
RATED VOLTAGE:	220V~240V~50Hz
POWER CONSUMPTION:	1000W (Low Setting), 2000W (Highest Setting),
Certifications:	UKCA , CE , Rohs
Warranty:	1 Year
DIMENSIONS (L X W X H):	54.5 (L) X 24.5 (W) X 66 (H) CM
NET WEIGHT:	4.2 Kg
GROSS WEIGHT:	5.2 Kg

DISPOSAL OF THIS DEVICE



At the end of the product life cycle, you should not throw this machine into the normal household garbage but bring the product to a collection Point for the recycling of electrical and electronic equipment.

FIND US ONLINE





2000W MICA Panel Space Heater | Model NO: PM830

Super Tech Health Limited
129 Shady Lane
Great Barr
Birmingham
West Midlands
B44 9ER
United Kingdom

WWW.PUREMATE.CO.UK